

MODELO RRO

RRO CON EJE POSITIVO

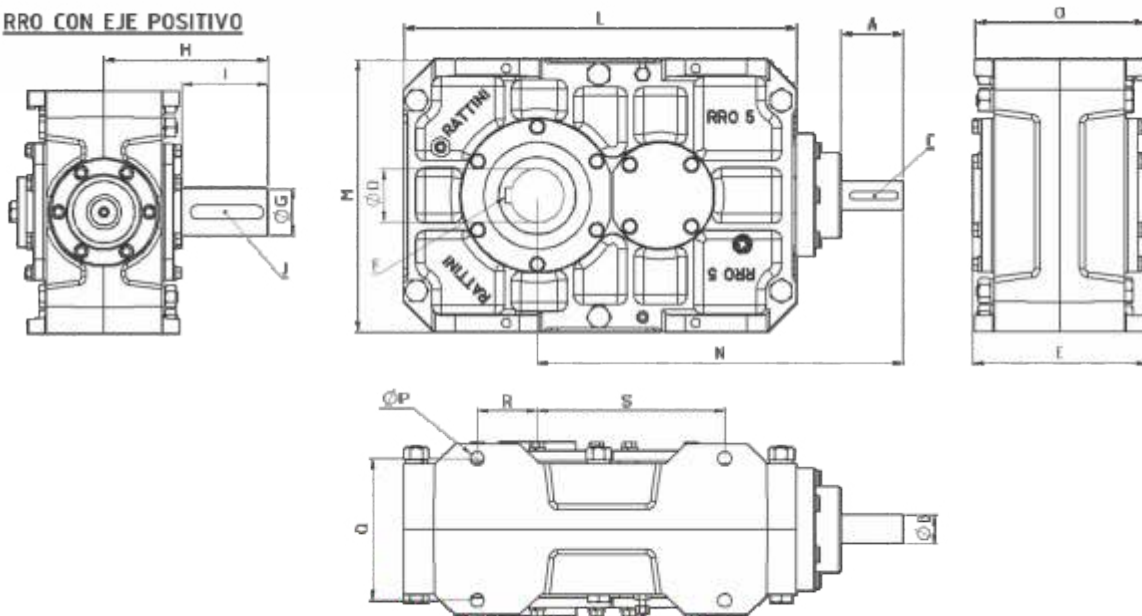


TABLA DE DIMENSIONES [mm]

	EJE ENTRADA			EJE HUECO			EJE POSITIVO												PESO
MOD	A	ØB	C	ØD	E	F	ØG	H	I	J	L	M	N	O	ØP	Q	R	S	KG
3	54	25	8x4	45	152	14x4,5	45	159,5	82	14x4,5	325	224	315	152	12	130	63,5	166,5	41
5	64	30	8x4	55	180	16x5	55	190	100	16x5	405	280	377	175	14	146	62	193	63
10	83	40	10x5	70	224	16x5	70	235,5	114,5	18x6	524	360	479	242	17	205	68,75	231,3	135
12	100	45	14x4,5	90	260	24x7	90	255	125	24x7	585	400	543	252	20	216	87,5	272,5	



MODELO RRO

TABLA DE POTENCIAS RRO

MODELO	RELACION		HP		
	IN	IR	1500 RPM	1000 RPM	500 RPM
3	30	29.9	5.5	3.5	2
	25	24.92	8	5.5	2.5
	22	21.87	9.5	6.5	3
	20	19.64	9.5	6.5	3
	17	16.99	11	7.5	3.5
	15	15.08	11	7.5	3.5
	13	13.54	12	8	4
	12	11.71	12	8	4
5	30	30.79	12	8	4
	25	24.92	16	10.5	5
	22	21.9	19	12.5	6
	22	21.23	19	12.5	6
	20	19.28	19	12.5	6
	17	17.37	22	14.5	7
	15	15.1	22	14.5	7
	13	13.29	25	16.5	8
	12	11.97	25	16.5	8
10	30	30.34	20	13.5	7
	25	24.92	27	18	9
	22	21.9	35	23	11.5
	20	19.28	35	23	11.5
	17	17.37	40	26.5	13
	15	15.1	40	26.5	13
	13	13.29	45	30	15
	12	11.97	45	30	15
12	30	29.9	40	26.5	13
	25	-	50	33	17
	22	21.68	60	40	20
	20	19.98	60	40	20
	15	14.94	65	43	22
	13	13.78	72	48	24
	12	-	72	48	24

FS
1